


## LED WALL WASHER 36x3W RGB 4SC IP54

### User Manual

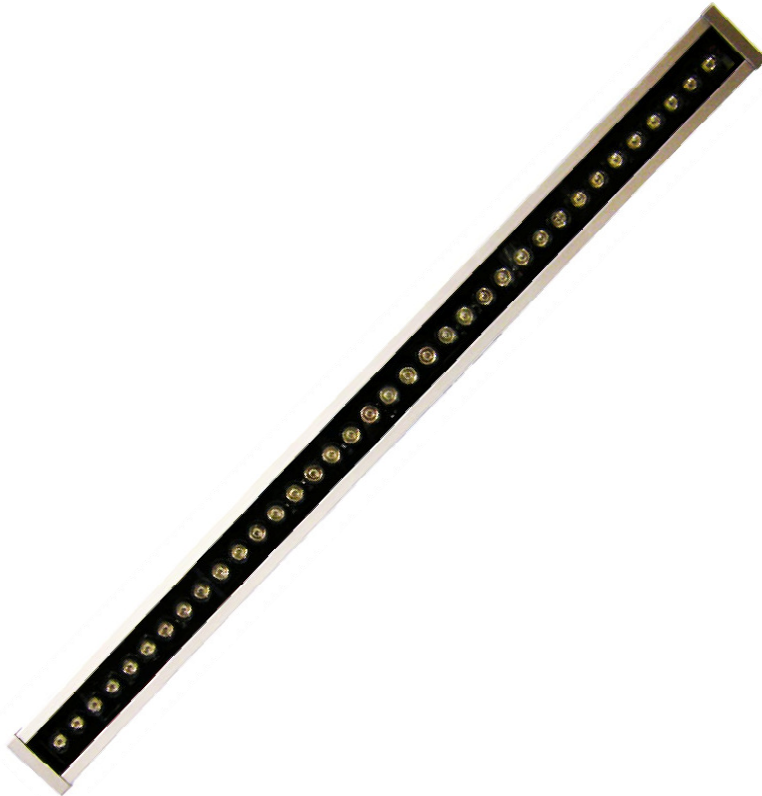

**Unpacking:** Thank you for purchasing the. Every has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect your fixture for any damage and be sure all equipment necessary to operate the unit has arrived intact. In the event damage has been found or parts are missing, please contact our toll free customer support number for further instructions. Please do not return this unit to your dealer without contacting customer support first.

**Introduction:** The is a 7 channel or 16 channel. The fixture can operate in three different operating modes; DMX control, Auto-Mode, or in a Master/Slave configuration. The comes with several built in programs that can be used, while operating as a dimmer unit or when used in multiples linked in a master/slave configuration. *For best results use fog or special effects smoke to enhance the beams projections.* The device can be used outdoors.

**Warning!** This may cause severe eye damage. Avoid looking directly into the light source at all times!

#### Model:

**Voltage:** 110V~240V,50Hz~60Hz

**LEDs :** 36 x 3W RGB

**Weight:** 3,8Kgs.

**Dimensions :** 101 x 7,8 x 7,0cm

**Colors :** RGB Color Mixing

**DMX Channels :** 7 or 16 DMX Channel Modes

**Waterproof:** IP 65

## 1. LED DISPLAY

No	DISPLAY	FUNCTION
1	A001	7 channel address code, (001-255) B, C buttons to add or reduce
2	D001	16 channel address code, (001-255) B, C buttons to add or reduce
3	CC50	Seven colors jump change, (01-99) B, C buttons to change the speed
4	CP50	Seven color pulse change, gradual change (01-99), B, C buttons to change the speed
5	DE50	Seven color chase, (01-99) B, C buttons to change the speed
6	BEBE	No function
7	H255	Strobe (001-255) B, C buttons to change the speed
8	R255	RED (001-255) B, C buttons to change brightness
9	G255	GREEN (001-255) B, C buttons to change brightness
10	B255	BLUE (001-255) B, C buttons to change brightness

### DMX channel and function

#### - 7 channel Mode:

Channel	Function	Description
1	Whole Dimmer	RGB Linear Dimmer, from faint to bright
2	Strobe	RGB Strobe, from slow to fast
3	Function setting	0-49 – DMX512 50-99 – Jump Change 100-149 – gradual change, pulse change

		150-199 – Chase change 200-255 – Jump change, gradual change, pulse change, RUN change
4	Function Speed	From slow to fast
5	RED Dimmer	RED linear Dimmer, from faint to bright
6	GREEN Dimmer	GREEN linear Dimmer, from faint to bright
7	BLUE Dimmer	BLUE linear Dimmer, from faint to bright

#### - 16 channel Mode:

Channel	Function	Description
1	Whole Dimmer	RGB Linear Dimmer, from faint to bright
2	Strobe	RGB Strobe, from slow to fast
3	Function setting	0-49 – DMX512 50-99 – Jump Change 100-149 – gradual change, pulse change 150-199 – Chase change 200-255 – Jump change, gradual change, pulse change, RUN change
4	Function Speed	From slow to fast
5	RED Dimmer	RED linear Dimmer, from faint to bright
6	GREEN Dimmer	GREEN linear Dimmer, from faint to bright
7	BLUE Dimmer	BLUE linear Dimmer, from faint to bright

8-10	RGB Dimmer	2 <sup>nd</sup> group RGB linear Dimmer, from faint to bright
11-13	RGB Dimmer	3 <sup>rd</sup> group RGB linear Dimmer, from faint to bright
14-16	RGB Dimmer	4 <sup>th</sup> group RGB linear Dimmer, from faint to bright