



**FLASH**



**LED Moving Head INFINITE BAR**  
**5x15W OSRAM - No limit**  
**F7100097**

## Table of Contents

1	Introduction.....	2
2	Safety information .....	2
3	Product information .....	2
3.1	Specification.....	2
4	Installation.....	3
5	Connections.....	3
5.1	Connecting DMX signal.....	3
5.2	Voltage specification .....	3
5.3	Connecting power supply .....	3
6	Operation manual.....	4
6.1	Control panel .....	4
6.2	DMX channel list.....	4

## Spis treści

1	Wprowadzenie.....	9
2	Zasady bezpieczeństwa .....	9
3	Informacje o produkcie .....	9
3.1	Specyfikacja.....	9
4	Instalacja .....	10
5	Połączenia .....	10
5.1	Podłączenie sygnału DMX.....	10
5.2	Specyfikacja zasilania.....	10
5.3	Podłączanie zasilania.....	11
6	Instrukcja użytkowania.....	11
6.1	Panel sterowania .....	11
6.2	Lista kanałów DMX.....	11

## 1 INTRODUCTION

Thank you for purchasing LED Moving Head INFINITE BAR 5x15W OSRAM - No limit. For safety reasons and to ensure the trouble-free operation, carefully read the instructions.

## 2 SAFETY INFORMATION

1. Installation should be done by qualified personnel in order to minimize the risk of accidental electric shock
2. Disconnect the power supply before installation.
3. Before connecting the unit to the mains, make sure it is not damaged mechanically. If you notice any signs of damage you should contact your dealer immediately. Do not connect the device to the mains.
4. Do not use the device in high humidity conditions and at temperatures above 40° C
5. To avoid damage please don't use organic solvents to clean the fixture shell.
6. The device must be installed on stable structures
7. It should be installed in a well-ventilated place, at a distance of 15cm or more from the walls. Please check if the fan and ventilation holes are unobstructed.

## 3 PRODUCT INFORMATION

### 3.1 Specification

- Power consumption: 80W
- Power supply voltage: 95 - 240V
- Voltage frequency: 50/60Hz
- Diode type: 4in1
- Number of diodes: 5
- Diode power: 15W
- Display: LCD Matrix
- Color: RGBW
- Dimming: Linear: 0 - 100%
- Flash frequency (min): 0Hz
- Flash frequency (max): 12Hz
- PAN range: No limit
- TILT range: No limit
- Number of DMX channels: 14 / 22 / 30 / 38
- DMX standard: DMX 512
- Control interface: 4 buttons
- AC IN: powerCON
- AC OUT: powerCON
- DMX IN: XLR - 3 pin
- DMX OUT: XLR - 3 pin
- IP Rating: IP20
- Housing made: ABS
- Cooling: Active

## 4 INSTALLATION

After removing the packaging, check if the device was not damaged during transport. Before connecting to the mains, make sure that the device is securely mounted. The manufacturer is not responsible for damage caused by unstable mounting.

Ensure proper connection to the mains and proper grounding. Make sure that the electrical parameters are consistent with device requirements. All activities, including connecting the device to the mains must be performed by qualified personnel.


## 5 CONNECTIONS

The device is equipped with the following interfaces:

1. DMX (in/out): XLR 3-pin socket
2. Power (in/out): powerCON

### 5.1 Connecting DMX signal

The connection is performed using cable with XLR-female -> XLR-Male plugs.

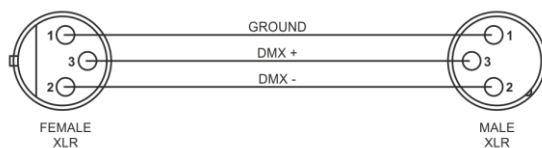

### 5.2 Voltage specification

Input Voltage	Total Power	Frequency
95~240V	80W	50/60Hz

### 5.3 Connecting power supply

The connection is performed using power cable with powerCON connector (included).

The device must be operated by qualified personnel. Make sure that the power grid supply parameters are consistent with device parameters and limitations are not exceeded.

**CAUTION!** In the case of cable damage do not attempt to repair. Replacement or repair can be made only on the manufacturer or by a person with appropriate permissions.

## 6 OPERATION MANUAL

### 6.1 Control panel

The control panel is equipped with 4-digit display and 4 control buttons with the following functions:

1. MENU – choose function
2. DOWN – change value
3. UP – change value
4. ENTER – confirm changes

### 6.2 DMX channel list

14CH mode		
Channel	Function	Effect
CH 1	PAN	0-255: 0-360°
CH 2	PAN no limit	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 3	TILT	0-255: 0-360°
CH 4	TILT no limit	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 5	PAN/TILT speed	0-255: fast to slow
CH 6	Dimmer	0-255: 0-100%
CH 7	Strobe	0-9: No function 10-255: Strobe, slow to fast
CH 8	Red	0-255: 0-100%
CH 9	Green	0-255: 0-100%
CH 10	Blue	0-255: 0-100%
CH 11	White	0-255: 0-100%
CH 12	Effect	0-10: No function 11-159: Colors 160-169: Auto run 1 170-179: Auto run 2 180-189: Auto run 3 190-199: Auto run 4 200-209: Auto run 5 210-219: Auto run 6 220-255: Sound control
CH 13	Effect speed	0-255: Slow to fast
CH 14	Reset	0-249: No function 250-255: Reset after 5s

<b>22CH mode</b>		
<b>Channel</b>	<b>Function</b>	<b>Effect</b>
CH 1	PAN	0-255: 0-360°
CH 2	PAN no limit	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 3	TILT (section 1)	0-255: 0-360°
CH 4	TILT no limit (section 1)	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 5	TILT (section 2)	0-255: 0-360°
CH 6	TILT no limit (section 2)	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 7	TILT (section 3)	0-255: 0-360°
CH 8	TILT no limit (section 3)	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 9	TILT (section 4)	0-255: 0-360°
CH 10	TILT no limit (section 4)	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 11	TILT (section 5)	0-255: 0-360°
CH 12	TILT no limit (section 5)	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 13	PAN/TILT speed	0-255: fast to slow
CH 14	Dimmer	0-255: 0-100%
CH 15	Strobe	0-9: No function 10-255: Strobe, slow to fast
CH 16	Red (section 1)	0-255: 0-100%
CH 17	Green (section 1)	0-255: 0-100%
CH 18	Blue (section 1)	0-255: 0-100%
CH 19	White (section 1)	0-255: 0-100%
CH 20	Effect	0-10: No function 11-159: Colors 160-169: Auto run 1 170-179: Auto run 2 180-189: Auto run 3 190-199: Auto run 4 200-209: Auto run 5 210-219: Auto run 6 220-255: Sound control
CH 21	Effect speed	0-255: Slow to fast
CH 22	Reset	0-249: No function 250-255: Reset after 5s

### 30CH mode

Channel	Function	Effect
CH 1	PAN	0-255: 0-360°
CH 2	PAN no limit	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 3	TILT)	0-255: 0-360°
CH 4	TILT no limit	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 5	PAN/TILT speed	0-255: fast to slow
CH 6	Dimmer	0-255: 0-100%
CH 7	Strobe	0-9: No function 10-255: Strobe, slow to fast
CH 8	Red (section 1)	0-255: 0-100%
CH 9	Green (section 1)	0-255: 0-100%
CH 10	Blue (section 1)	0-255: 0-100%
CH 11	White (section 1)	0-255: 0-100%
CH 12	Red (section 2)	0-255: 0-100%
CH 13	Green (section 2)	0-255: 0-100%
CH 14	Blue (section 2)	0-255: 0-100%
CH 15	White (section 2)	0-255: 0-100%
CH 16	Red (section 3)	0-255: 0-100%
CH 17	Green (section 3)	0-255: 0-100%
CH 18	Blue (section 3)	0-255: 0-100%
CH 19	White (section 3)	0-255: 0-100%
CH 20	Red (section 4)	0-255: 0-100%
CH 21	Green (section 4)	0-255: 0-100%
CH 22	Blue (section 4)	0-255: 0-100%
CH 23	White (section 4)	0-255: 0-100%
CH 24	Red (section 5)	0-255: 0-100%
CH 25	Green (section 5)	0-255: 0-100%
CH 26	Blue (section 5)	0-255: 0-100%
CH 27	White (section 5)	0-255: 0-100%
CH 28	Effect	0-10: No function 11-159: Colors 160-169: Auto run 1 170-179: Auto run 2 180-189: Auto run 3 190-199: Auto run 4 200-209: Auto run 5 210-219: Auto run 6 220-255: Sound control
CH 29	Effect speed	0-255: Slow to fast
CH 30	Reset	0-249: No function 250-255: Reset after 5s

<b>36CH mode</b>		
<b>Channel</b>	<b>Function</b>	<b>Effect</b>
CH 1	PAN	0-255: 0-360°
CH 2	PAN no limit	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 3	TILT (section 1)	0-255: 0-360°
CH 4	TILT no limit (section 1)	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 5	TILT (section 2)	0-255: 0-360°
CH 6	TILT no limit (section 2)	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 7	TILT (section 3)	0-255: 0-360°
CH 8	TILT no limit (section 3)	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 9	TILT (section 4)	0-255: 0-360°
CH 10	TILT no limit (section 4)	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 11	TILT (section 5)	0-255: 0-360°
CH 12	TILT no limit (section 5)	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 13	PAN/TILT speed	0-255: fast to slow
CH 14	Dimmer	0-255: 0-100%
CH 15	Strobe	0-9: No function 10-255: Strobe, slow to fast
CH 16	Red (section 1)	0-255: 0-100%
CH 17	Green (section 1)	0-255: 0-100%
CH 18	Blue (section 1)	0-255: 0-100%
CH 19	White (section 1)	0-255: 0-100%
CH 20	Red (section 2)	0-255: 0-100%
CH 21	Green (section 2)	0-255: 0-100%
CH 22	Blue (section 2)	0-255: 0-100%
CH 23	White (section 2)	0-255: 0-100%
CH 24	Red (section 3)	0-255: 0-100%
CH 25	Green (section 3)	0-255: 0-100%
CH 26	Blue (section 3)	0-255: 0-100%
CH 27	White (section 3)	0-255: 0-100%
CH 28	Red (section 4)	0-255: 0-100%
CH 29	Green (section 4)	0-255: 0-100%
CH 30	Blue (section 4)	0-255: 0-100%
CH 31	White (section 4)	0-255: 0-100%
CH 32	Red (section 5)	0-255: 0-100%
CH 33	Green (section 5)	0-255: 0-100%
CH 34	Blue (section 5)	0-255: 0-100%



CH 35	White (section 5)	0-255: 0-100%
CH 36	Effect	0-10: No function 11-159: Colors 160-169: Auto run 1 170-179: Auto run 2 180-189: Auto run 3 190-199: Auto run 4 200-209: Auto run 5 210-219: Auto run 6 220-255: Sound control
CH 37	Effect speed	0-255: Slow to fast
CH 38	Reset	0-249: No function 250-255: Reset after 5s

## 1 WPROWADZENIE

Dziękujemy za zakup urządzenia LED Moving Head INFINITE BAR 5x15W OSRAM - No limit. Ze względów bezpieczeństwa oraz w celu zapewnienia bezawaryjnej pracy urządzenia należy dokładnie zapoznać się z instrukcją.

## 2 ZASADY BEZPIECZEŃSTWA

1. Instalacja powinna być przeprowadzana przez wykwalifikowany personel, aby zminimalizować ryzyko przypadkowego porażenia prądem
2. Przed instalacją należy odłączyć urządzenie od sieci
3. Przed podłączeniem urządzenia do sieci energetycznej należy sprawdzić, czy nie jest ono uszkodzone mechanicznie. Jeżeli widoczne są jakiegokolwiek ślady uszkodzenia należy niezwłocznie skontaktować się z dystrybutorem. Nie podłączać urządzenia do sieci elektrycznej.
4. Nie należy korzystać z urządzenia w warunkach dużej wilgotności powietrza oraz w temperaturze powyżej 40° C
5. Aby uniknąć uszkodzeń nie należy stosować rozpuszczalników organicznych do czyszczenia powłoki urządzenia.
6. Urządzenie należy instalować na stabilnych konstrukcjach
7. Urządzenie powinno być zainstalowane w dobrze wentylowanym pomieszczeniu, w odległości co najmniej 15cm od najbliższej powierzchni (ściany, sufitu itp). Jednocześnie należy upewnić się, że otwory wentylacyjne nie są zatkane oraz wentylatory działają poprawnie.

## 3 INFORMACJE O PRODUKCIE

### 3.1 Specyfikacja

- Pobór mocy: 80W
- Napięcie zasilania: 95 - 240V
- Częstotliwość napięcia: 50/60Hz
- Typ diody: 4w1
- Ilość diod: 5
- Moc diody: 15W
- Wyświetlacz: LCD Matrycowy
- Barwa: RGBW
- ZOOM: Nie
- Ściemnianie: Płynne: 0 - 100%
- Błysk - częstotliwość minimalna: 0Hz
- Błysk - częstotliwość maksymalna: 12Hz
- Zakres ruchu - PAN: no limit
- Zakres ruchu - TILT: no limit
- Ilość kanałów DMX: 14 / 22 / 30 / 38
- Standard DMX: DMX 512
- Sterowanie: 4 przyciski
- AC IN: powerCON
- AC OUT: powerCON

- DMX IN: XLR - 3 pin
- DMX OUT: XLR - 3 pin
- Stopień ochrony IP: IP20
- Rodzaj obudowy: ABS
- Chłodzenie: Aktywne

## 4 INSTALACJA

Po wyjęciu urządzenia z opakowania należy sprawdzić czy nie zostało ono uszkodzone podczas transportu. Przed podłączeniem do sieci elektrycznej należy upewnić się, że urządzenie zamocowane jest stabilnie. Producent nie ponosi odpowiedzialności za uszkodzenia spowodowane niestabilnym zamocowaniem urządzenia.

Podczas korzystania z urządzenia należy zadbać o poprawne podłączenie go do sieci elektrycznej oraz prawidłowe uziemienie. Należy upewnić się, że parametry sieci elektrycznej są zgodne z wymaganiami urządzenia. Wszelkie czynności obejmujące obsługę w zakresie podłączania urządzenia do sieci elektrycznej powinny być wykonywane przez wykwalifikowany personel.


## 5 POŁĄCZENIA

Urządzenie wyposażone jest w następujące interfejsy:

1. DMX (wejście/wyjście) – złącza: XLR 3-pin
2. Zasilanie (wejście/wyjście) – złącze: powerCON

### 5.1 Podłączenie sygnału DMX

Połączenie odbywa się przy użyciu przewodu z wtyczkami XLR-Żeński -> XLR-Męski

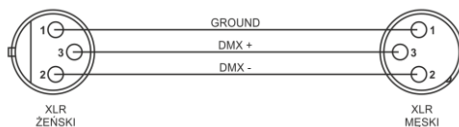

### 5.2 Specyfikacja zasilania

Napięcie zasilania	Pobór mocy	Częstotliwość zasilania
95~240V	90W	50/60Hz

### 5.3 Podłączanie zasilania

Połączenie odbywa się przy użyciu przewodu zakończony z jednej strony wtyczką sieci elektrycznej i wtyczką typu powerCON z drugiej strony (w zestawie).

Urządzenie musi być obsługiwane przez wykwalifikowany personel. Należy upewnić się, że parametry zasilania sieci energetycznej są zgodne z parametrami urządzenia i nie zostają przekroczone ograniczenia dotyczące poboru energii elektrycznej z sieci.

**UWAGA!** W przypadku uszkodzenia przewodu nie należy dokonywać samodzielnej naprawy. Wymiana lub naprawa może być wykonana jedynie w serwisie producenta lub przez osobę z odpowiednimi uprawnieniami.

## 6 INSTRUKCJA UŻYTKOWANIA

### 6.1 Panel sterowania

Panel sterowania wyposażony jest w wyświetlacz oraz w 4 przyciski sterujące o następujących funkcjach:

1. MENU – wybranie funkcji
2. DOWN – edycja parametru
3. UP – edycja parametru
4. ENTER – zatwierdzenie zmian

### 6.2 Lista kanałów DMX

14CH mode		
Channel	Function	Effect
CH 1	PAN	0-255: 0-360°
CH 2	PAN no limit	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 3	TILT	0-255: 0-360°
CH 4	TILT no limit	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 5	PAN/TILT speed	0-255: fast to slow
CH 6	Dimmer	0-255: 0-100%
CH 7	Strobe	0-9: No function 10-255: Strobe, slow to fast
CH 8	Red	0-255: 0-100%
CH 9	Green	0-255: 0-100%
CH 10	Blue	0-255: 0-100%
CH 11	White	0-255: 0-100%
CH 12	Effect	0-10: No function 11-159: Colors 160-169: Auto run 1 170-179: Auto run 2 180-189: Auto run 3 190-199: Auto run 4 200-209: Auto run 5 210-219: Auto run 6 220-255: Sound control

CH 13	Effect speed	0-255: Slow to fast
CH 14	Reset	0-249: No function 250-255: Reset after 5s

<b>22CH mode</b>		
<b>Channel</b>	<b>Function</b>	<b>Effect</b>
CH 1	PAN	0-255: 0-360°
CH 2	PAN no limit	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 3	TILT (section 1)	0-255: 0-360°
CH 4	TILT no limit (section 1)	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 5	TILT (section 2)	0-255: 0-360°
CH 6	TILT no limit (section 2)	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 7	TILT (section 3)	0-255: 0-360°
CH 8	TILT no limit (section 3)	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 9	TILT (section 4)	0-255: 0-360°
CH 10	TILT no limit (section 4)	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 11	TILT (section 5)	0-255: 0-360°
CH 12	TILT no limit (section 5)	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 13	PAN/TILT speed	0-255: fast to slow
CH 14	Dimmer	0-255: 0-100%
CH 15	Strobe	0-9: No function 10-255: Strobe, slow to fast
CH 16	Red (section 1)	0-255: 0-100%
CH 17	Green (section 1)	0-255: 0-100%
CH 18	Blue (section 1)	0-255: 0-100%
CH 19	White (section 1)	0-255: 0-100%
CH 20	Effect	0-10: No function 11-159: Colors 160-169: Auto run 1 170-179: Auto run 2 180-189: Auto run 3 190-199: Auto run 4 200-209: Auto run 5 210-219: Auto run 6 220-255: Sound control
CH 21	Effect speed	0-255: Slow to fast
CH 22	Reset	0-249: No function 250-255: Reset after 5s

<b>30CH mode</b>		
<b>Channel</b>	<b>Function</b>	<b>Effect</b>
CH 1	PAN	0-255: 0-360°
CH 2	PAN no limit	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 3	TILT)	0-255: 0-360°
CH 4	TILT no limit	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 5	PAN/TILT speed	0-255: fast to slow
CH 6	Dimmer	0-255: 0-100%
CH 7	Strobe	0-9: No function 10-255: Strobe, slow to fast
CH 8	Red (section 1)	0-255: 0-100%
CH 9	Green (section 1)	0-255: 0-100%
CH 10	Blue (section 1)	0-255: 0-100%
CH 11	White (section 1)	0-255: 0-100%
CH 12	Red (section 2)	0-255: 0-100%
CH 13	Green (section 2)	0-255: 0-100%
CH 14	Blue (section 2)	0-255: 0-100%
CH 15	White (section 2)	0-255: 0-100%
CH 16	Red (section 3)	0-255: 0-100%
CH 17	Green (section 3)	0-255: 0-100%
CH 18	Blue (section 3)	0-255: 0-100%
CH 19	White (section 3)	0-255: 0-100%
CH 20	Red (section 4)	0-255: 0-100%
CH 21	Green (section 4)	0-255: 0-100%
CH 22	Blue (section 4)	0-255: 0-100%
CH 23	White (section 4)	0-255: 0-100%
CH 24	Red (section 5)	0-255: 0-100%
CH 25	Green (section 5)	0-255: 0-100%
CH 26	Blue (section 5)	0-255: 0-100%
CH 27	White (section 5)	0-255: 0-100%
CH 28	Effect	0-10: No function 11-159: Colors 160-169: Auto run 1 170-179: Auto run 2 180-189: Auto run 3 190-199: Auto run 4 200-209: Auto run 5 210-219: Auto run 6 220-255: Sound control
CH 29	Effect speed	0-255: Slow to fast
CH 30	Reset	0-249: No function 250-255: Reset after 5s

### 36CH mode

Channel	Function	Effect
CH 1	PAN	0-255: 0-360°
CH 2	PAN no limit	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 3	TILT (section 1)	0-255: 0-360°
CH 4	TILT no limit (section 1)	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 5	TILT (section 2)	0-255: 0-360°
CH 6	TILT no limit (section 2)	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 7	TILT (section 3)	0-255: 0-360°
CH 8	TILT no limit (section 3)	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 9	TILT (section 4)	0-255: 0-360°
CH 10	TILT no limit (section 4)	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 11	TILT (section 5)	0-255: 0-360°
CH 12	TILT no limit (section 5)	0-127: No function 128-191: Clockwise rotation, fast to slow 192-255: Counterclockwise rotation, slow to fast
CH 13	PAN/TILT speed	0-255: fast to slow
CH 14	Dimmer	0-255: 0-100%
CH 15	Strobe	0-9: No function 10-255: Strobe, slow to fast
CH 16	Red (section 1)	0-255: 0-100%
CH 17	Green (section 1)	0-255: 0-100%
CH 18	Blue (section 1)	0-255: 0-100%
CH 19	White (section 1)	0-255: 0-100%
CH 20	Red (section 2)	0-255: 0-100%
CH 21	Green (section 2)	0-255: 0-100%
CH 22	Blue (section 2)	0-255: 0-100%
CH 23	White (section 2)	0-255: 0-100%
CH 24	Red (section 3)	0-255: 0-100%
CH 25	Green (section 3)	0-255: 0-100%
CH 26	Blue (section 3)	0-255: 0-100%
CH 27	White (section 3)	0-255: 0-100%
CH 28	Red (section 4)	0-255: 0-100%
CH 29	Green (section 4)	0-255: 0-100%
CH 30	Blue (section 4)	0-255: 0-100%
CH 31	White (section 4)	0-255: 0-100%
CH 32	Red (section 5)	0-255: 0-100%
CH 33	Green (section 5)	0-255: 0-100%
CH 34	Blue (section 5)	0-255: 0-100%
CH 35	White (section 5)	0-255: 0-100%

CH 36	Effect	0-10: No function 11-159: Colors 160-169: Auto run 1 170-179: Auto run 2 180-189: Auto run 3 190-199: Auto run 4 200-209: Auto run 5 210-219: Auto run 6 220-255: Sound control
CH 37	Effect speed	0-255: Slow to fast
CH 38	Reset	0-249: No function 250-255: Reset after 5s